

# LENOXX

**MODEL NO: UR10  
10 LITRE HOT WATER URN**

**BEFORE USING THE WATER BOILER, PLEASE READ ALL THE INSTRUCTIONS:**

***GENERAL INFORMATION:***

- Never immerse the appliance in water
- Never switch on the appliance if there is no water in the tank
- Always use the appliance on a dry, level and heat-resistant surface away from any edges
- Ensure hands are dry before using the appliance
- **This appliance produces boiling water – ensure the unit is out of reach of children.**

***THE APPLIANCE MUST BE EARTHED  
INSTALLATION:***

- Before using the appliance, first clean the tank, top cover and body, etc.
- Place the unit upright on a firm and flat surface.
- Plug the appliance into an earthed socket while the unit is switched off.

**THE UNIT IS NOW READY TO USE**

**WARNING:**

- The outside of the appliance gets very hot during use. **Do not touch the surface.**
- Do not remove the top cover while boiling.
- If the appliance is overfilled, boiling water may spill out of the unit.
- This appliance should be for household use only.
- The parts which are easy to touch may become hot, keep them out of the reach of babies and children.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, in order to avoid danger, please take the damaged unit to the manufacturer, maintenance department of the manufacturer or a similar professional department for changing.

- The instructions shall state that the appliance is not intended to be operated by means of an external timer or a separate remote-control system
- Children should be supervised to ensure that they do not play with the appliance.

### **HOW TO BOIL WATER:**

Fill the tank with cold water. There is a maximum level marked on the inside of the tank – do not fill above this mark. Make sure the environmental temperature indoors is at about 10-38 degrees and the environmental humidity is less than 90%.

Replace the cover and switch the unit on. The heating lamp indicator should now light up and the unit will begin to boil the water.

After about 35 minutes the water temperature will have reached 97 degrees and the auto-thermostat switch the large heating element off and the small heating element on, which automatically keeps the water at the correct temperature.

When about three cups of water are remaining in the tank, turn the unit off and unplug it from the electric outlet.

### ***THERMAL CUT-OUT:***

The appliance is fitted with a thermal cut-out. If this is activated, the unit will turn itself off, although the lamp will remain on. **The unit must be unplugged before it can be reset.** To reset the appliance, wait until the unit has cooled down. The reset button is located on the underside of the appliance.

This safety device may have been switched off during transport, if so reset the thermal cut-off following the above instructions.

If resetting this thermal cut-out does not switch the unit back on, please contact the manufacturer.

### ***CLEANING THE APPLIANCE***

This unit must be cleaned thoroughly after each use. This is in addition to a weekly cleaning using vinegar to remove mineral deposits. If these deposits are not removed, pitting of the metal can occur and may result in damage to the appliance.

### ***CLEANING AFTER USE:***

- Clean the tank, top cover and the body, etc. and dry them with a soft dry cloth. All these parts are made of stainless steel and can be cleaned with a scouring agent.
- If the appliance is to function properly, the cavity in the middle of the base must be

free of lime scale. Use a scale remover if necessary.

- This heater includes an overheat protection system that turns off the heater when parts of the unit are getting excessively hot.
- To clean the tap, move a brush up and down through the tap, then insert the brush through opening inside the appliance to clean the tap connection.  
Wash the tap handle in hot soapy water and rinse. Replace the tap.
- Do not use baking soda to clean the appliance as it can discolor and pit the metal.

**This unit requires a 13Amp plug.**

If the power cable is damaged, appropriate cable must be used, and work carried out by a competent person.

***USAGE PARAMETERS:***

Model No.	Power	Volume	Voltage	Environmental Temperature in Use	Environmental Humidity in Use
UR10	2000W	10L	220-240V/50Hz	10-38 degrees	Less than 90%

# LENOXX

**Lenoxx Electronics Aust. Pty Ltd**  
Importers and Wholesalers of Electronics & Toys  
6 Oban court, Laverton North. Victoria. 3026  
ABN: 97 844 321 851  
PH: 03 9267 2100  
FAX: 03 9267 2199  
For service call: 1300 666 848  
Email: [lenoxx@lenoxx.com.au](mailto:lenoxx@lenoxx.com.au)  
[www.lenoxx.com.au](http://www.lenoxx.com.au)